

ERROR CODE

- ① E01: process fan failure
- ② E02: regen. fan failure
- ③ E03: TH1 alarm, 140 °C temp. sensor alarm
- ④ E04: TH3 alarm, 70 °C temp. sensor alarm
- ⑤ E05: rotor alarm
- ⑥ E06: 3 phase loss or wrong phase sequence
- ⑦ E11: parameter 1 error
- ⑧ E12: parameter 2 error
- ⑨ E13: PT100 error
- ⑩ E14: high temperature error
- ⑪ E15: warming up error
- ⑫ E16: temperature exceeds the set temperature by 60°C alarm